


IR Cable Lock & Golf Club Clip



- 1 With the IR Dot facing away from the band, insert the Cable Lock into the clip.




- 2 Fully insert the Cable Lock into the clip as shown above.

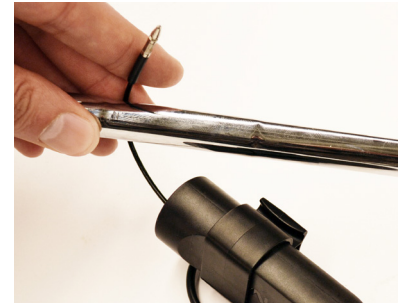

- 3 Loop the tether from the Cable Lock over the shaft of the golf club.



- 4 Insert the end of the tether into the Cable Lock.

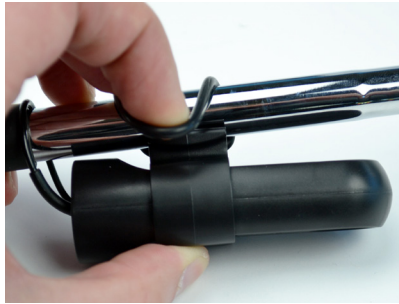

- 5 With the IR Dot pointing towards the golf club's head, hold the clip against the golf club shaft, loop the band from the clip over the shaft.



- 6 Hook the band into the clip.



- 7 Position the Cable Lock and clip near the grip on the golf club.




- 8 To remove; Insert a charged and authorized OneKEY into the port on the Cable Lock and press the button. Pull the tether from the Cable Lock

IR Cable Lock & Golf Club Clip



9a Unhook the band from the shallower side of the clip.

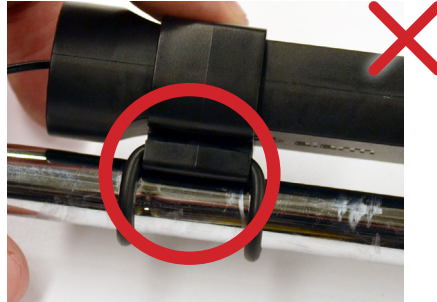

9b Do not attempt to unhook the band from the captured side of the clip.